

EVO II



Quick user guide


11/2024

Introduction

The EVO II remote control allows the copying and/or programming of HCS controls (rolling code) with a frequency of 433.920 MHz and OOK modulation.

Each button on the remote transmits a different channel (see image). The remote also has a hidden button on the back.

This device is compatible with Kaptia Klever and other duplicators.

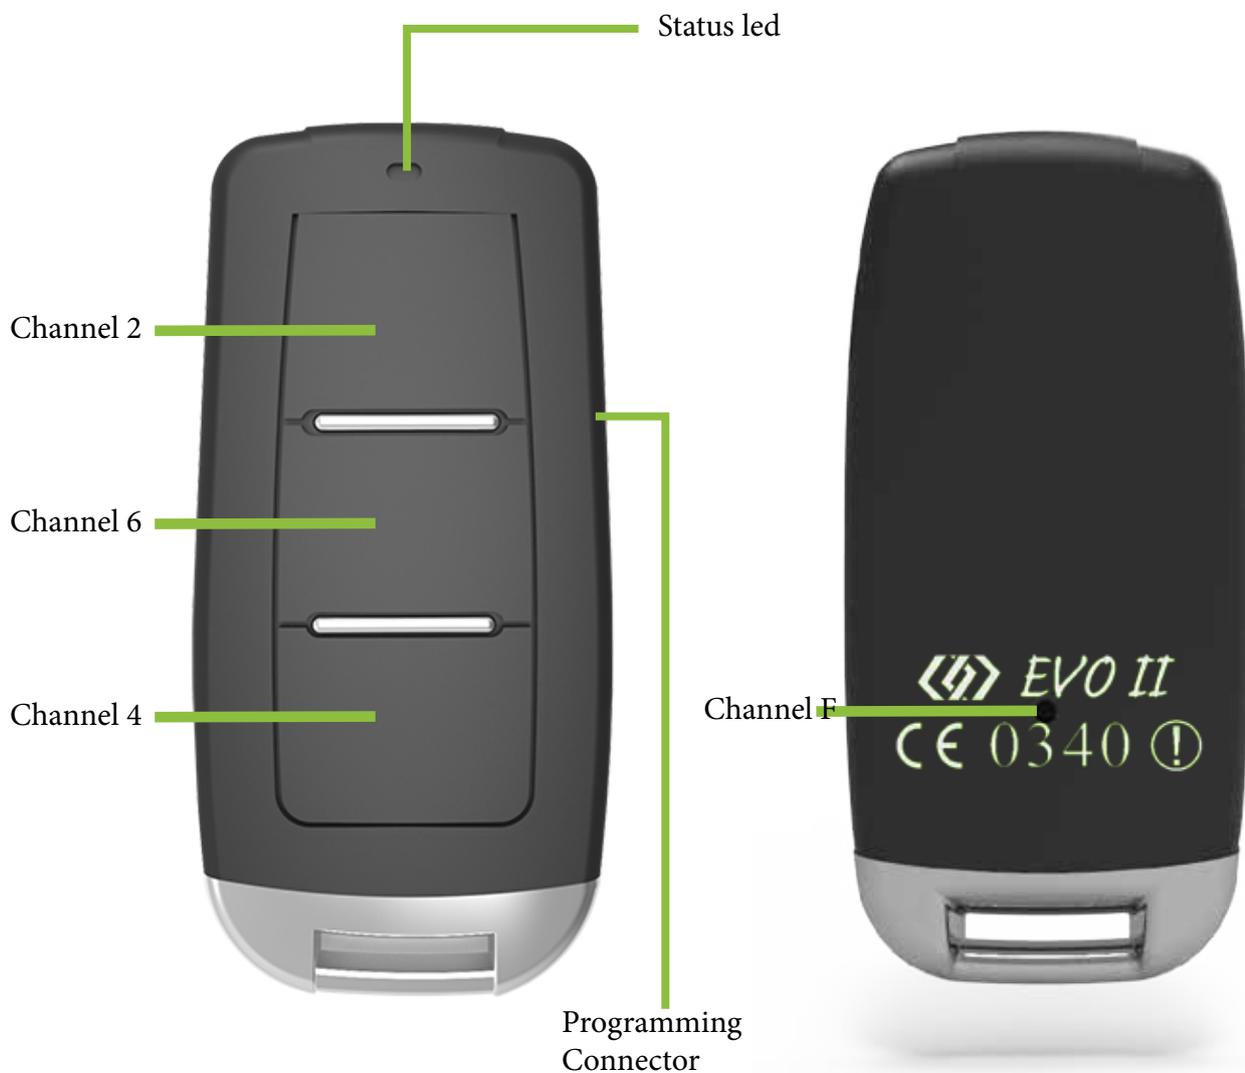

Operation


To program the remote control, it must be connected to the micro USB cable of the Kaptia Klever duplicator. The app will guide you through all the necessary steps until programming is complete.

Indicator light

The device LED reports the following situations:

The LED flashes regularly while the button is pressed	The code is transmitted normally
The LED flashes slowly	Battery is close to empty (depending on settings)

Channel settings

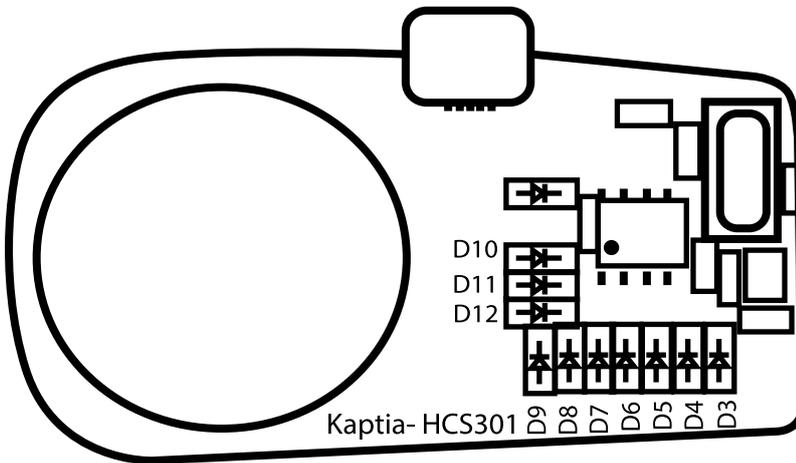

The channels for each button can be obtained by following the following tables. For each combination, the diodes marked with the symbol must be soldered and those that are not marked must be removed. The channels highlighted in yellow are the channels that come with the remote control by default.

Top front button

Top front button

This button will always transmit channel **2**

Center front button

Chan- nel	D11	D12
2	<input checked="" type="checkbox"/>	
4		<input checked="" type="checkbox"/>
6	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Chan- nel	D4	D6	D7	D9
1	<input checked="" type="checkbox"/>			
2				<input checked="" type="checkbox"/>
3	<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>
4			<input checked="" type="checkbox"/>	
5	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	
6			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
7	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
8		<input checked="" type="checkbox"/>		
9	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		
A		<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>
B	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>
C		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
E		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Back button

Chan- nel	D3	D5	D8	D10
1	<input checked="" type="checkbox"/>			
2				<input checked="" type="checkbox"/>
3	<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>
4			<input checked="" type="checkbox"/>	
5	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	
6			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
7	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
8		<input checked="" type="checkbox"/>		
9	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		
A		<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>
B	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>
C		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
E		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Battery replacement

This remote control works with 2 NON-RECHARGEABLE CR2016 type batteries.

To replace them, you must lever the notch on the right side with a coin or similar object until it opens.

Once opened, the used batteries must be removed from the battery holder and replaced with new ones of the same type, respecting the polarity.

Side notch



Technical characteristics

Compatible codes	HCS rolling code
Operating frequency	433.920 MHz
Number of buttons	3
Maximum number of codes	1
Range	< 100 meters
Status LED color	Blue
Battery	2 x 3V (type CR2016)
Compatible system	Kaptia Klever and other duplicators
Updatable:	No

Important: The programming connector should only be used to program the device. Using this connector for any other purpose may damage the device.